



DEMAND MORE

# **Intex Technologies (India) Ltd.**

***GPRS SETTING Steps for INTEX Phone***



DEMAND MORE

# *INTEX PHONE GPRS SETTING*

## Basic requirement to run GPRS in Intex Mobile

### Step-1 (Default Profile):-

1. Go to Menu->Services->WAP->Setting->Select Sim(Sim1/Sim2-as per GPRS activated)->Edit Account->Select Sim1/Sim2 as per GPRS activated->Ok->Select Account(e.g Airtel,vodafone as per ur GPRS Sim.)->Ok->Activate Account->Ok-Back->Back->Back.
2. **Go to Homepage->Ok (Now u can browse the GPRS).**



DEMAND MORE

## Step-2 (Edit Profile):-

1. Go to Menu->Services->Data Account->GPRS->Select Profile(e.g Airtel,Idea as per your Sim.)->Enter Account Name(As per ur Sim)->Enter APN(As per your Sim)->Done->Ok->Done->Save->Yes->Back->Back
2. Go to->WAP->Setting->Select Sim(Sim1/Sim2-as per GPRS activated)->Edit Account->Select Sim1/Sim2 (as per GPRS activated)->Ok->Select Account(e.g Airtel,vodaphone as per your GPRS Sim.)->Ok->Edit Account->Ok->Enter Account Name->Enter Homepage->Data Account->GPRS->Select Data Account(as per ur GPRS Sim->Ok->Connection Type->Select HTTP->Ok->Enter Proxy Address->Enter Proxy Port(as per Service Provider)->Ok>Done->Save?->Yes >Activate Account->Ok->Back>Back>Back.
3. **Go to Homepage->Ok(Now u can browse the GPRS).**

**Note:-** Need to Edit only below parameters under the profile

1. Account Name
2. APN
3. Proxy Address and Proxy Port-under HTTP



DEMAND MORE

## Step-3 (Create Profile):-

1. Go to Menu->Services->Data Account->GPRS->Select Account(Any Empty Account)->Enter Account Name(As per your Sim/Choice)->Enter APN(As per Your Sim)-> Keep below parameter's as it is.

**User Name,Password,Auth.type->Done->Save?->Yes.**

2. Back->Back->Go to->WAP->Setting->Select Sim(Sim1/Sim2-as per GPRS activated)->Edit Profile/Account->Select Sim1/Sim2 as per GPRS activated->Ok->Select Profile/Account(Which you had created)->Ok->Edit Profile/Account->Ok->Enter Account Name, Homepage->Data Account->GPRS->Select Data Account(Which you had created)->Ok->Connection Type->Select HTTP->Ok->Enter Proxy Address and Proxy Port->Ok->Done->Save?->Yes->Activate Profile>Ok->Back->Back->Back.

3. **Go to Homepage->Ok(Now u can browse the GPRS).**